



Bump Test Kit

User's Manual

G A S C L I P T E C H . C O M

CONTENTS

Bump Testing 3

Accessories and Replacement Parts 5

Failures/FAQ’s 5

Warranty..... 5

BUMP TESTING

Power detector on
Wait for sensors to auto zero
Double-tap the power button
The following screens will appear:



- Date screen will automatically scroll to User Text Screen



- User Text screen will automatically scroll to Show Options screen



- After "Show Option" appears press power button
- Last Cal date screen will show



- Cal In xxxd will automatically show



- After Cal In xxxd screen, the L. Bump screen will automatically show



- Once the above screen appears, press the power button.
- Apply Gas screen will appear



- Put calibration cap on detector and apply gas

ACCESSORIES AND REPLACEMENT PARTS

- Replacement Bump Regulator (REG-BT) - thumb press regulator
- Replacement Gas Cylinder 5.8L (MGC-BTK-Q-5.8) - 5.8L gas cylinder
- Hard Case (BTK-CASE) - kit in rugged case
- Rugged Case (TRVL-CASE) - Replacement rugged case only
- Travel bag (BT-BAG) - Replacement travel bag only
- Bump Test Kit in Travel Bag (BTK-BAG)

FAILURES/FAQ'S

"Err" - If a sensor is displaying **"Err"**, this sensor has failed and is therefore disabled. Contact GCT for either warranty replacement or replacement sensor(s).

"BUMP DUE" - If the detector is displaying **"BUMP DUE"**, the detector is either due for a bump test because of a scheduled test or has failed its last bump test. Refer to the **Bump Testing** section for more details.

Warranty

Please refer to our website for our full warranty.

****Detectors not included.**

For use with any multi-gas detector.

250+ bump tests per 5.8L bottle

No aerosol in quad gas